

Incandescent Pendant


492710
INSTALLATION SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-855-855-8926

- 1.** Remove the fixture from its original packaging. Next, remove the mounting plate (**1c**) from the canopy (**2a**) by removing the decorative nuts (**2b**). Attach the mounting plate (**1c**) to the electrical junction box (**1a**) using the two screws (**1d**) provided in the hardware package.
- 2.** To change fixture height, shorten or lengthen wire by removing set screw (**2c**) from canopy (**2a**) and push or pull wire to your desired length. Secure set screw (**2c**) in canopy (**2a**) to lock wire in place.
- 3.** You are now ready to mount the canopy (**2a**) to the mounting plate (**1c**). First connect all wires (**1b**) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Align the threaded studs (**1e**) with the holes on the surface of the canopy (**2a**). Next, push the canopy (**2a**) up towards the mounting plate (**1c**) and thread on the decorative nuts (**2b**) on the threaded studs (**1e**). This will secure the canopy to the mounting plate.
- 4.** To secure the shade showcasing (**3c**) to fixture, thread on the socket ring (**3b**) on the socket (**3a**) keeping the shade showcasing in-between.
- 5.** Install the bulb (bulb not included) to the fixture. You have now completed the installation of your fixture, enjoy.

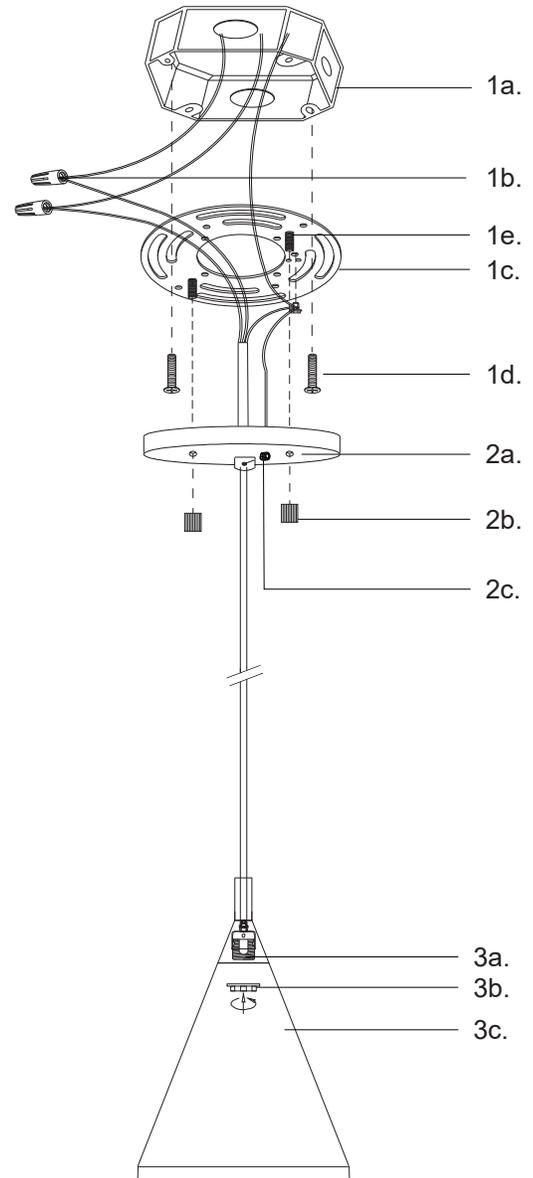

KUZCO

19054 28th Avenue Surrey, BC Canada V3Z 6M3
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196
W: kuzcolighting.com
20190117