## **Incandescent Vanity**


## START FROM HERE

- Make sure POWER is COMPLETELY OFF at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all times during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Technical Support: 1-855-855-8926

- 1. Remove fixture from its original package
- 2. Separate mounting plate (1c) from canopy (2a) by removing canopy screws (2b)
- **3.** Attach mounting plate (1c) to electrical junction box (1a) using screws provided (1d) in hardware package
- **4.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts **(1b)** provided in hardware package

- **5.** Attach canopy (2a) to mounting plate (1c) with canopy screws (2b)
- **6.** Place glass shade (**3a**) onto fixture base and secure together with socket nut (**2d**) using wrench (**2c**) and insert lamp (**3b**) into socket

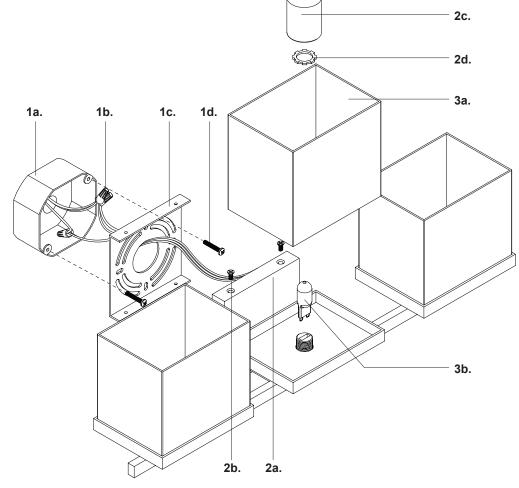



19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com 20200804

## 701103