## **LED Linear Pendant**


## LP45560 INSTALLATION SHEET

## START FROM HERE

- Make sure POWER is COMPLETELY OFF at the fuse box
- · Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assemblyKeep this installation sheet for future reference
- Technical Support: 1-855-855-8926
- 1. Remove the fixture from its original packaging
- 2. Separate the mounting plate (1c) from the canopy (2a) by removing the canopy screws (2b)
- **3.** Attach the mounting plate **(1c)** to the electrical junction box **(1a)** using junction box screws **(1e)** provided in the hardware package
- 4. Secure mounting plate (1c) to mounting surface with anchors (1f) and screws (1g)
- Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package and place driver (4a) in canopy (2a)

## Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- Use ELV (Electronic Low Voltage) or TRIAC type of dimmer for dimming application
- 120-277V input
  - **6.** Attach canopy (2a) to mounting plate (1c) with canopy screws (2b)
  - Mark and install ceiling anchors (3b) with screw (3a) and anchor (3c), opening on ceiling anchor (3b) facing towards canopy (2a). Ideal distance between ceiling anchors (3b) is L58-11/16" and W3-15/16" (See Illustration 1)
  - Place wire onto pulley (3g), insert into ceiling anchor (3b) and secure with screw (3f)
  - **9.** Fine tone wire length if necessary, by push and hold wire gripper **(2g)** and then adjust wire to desired length

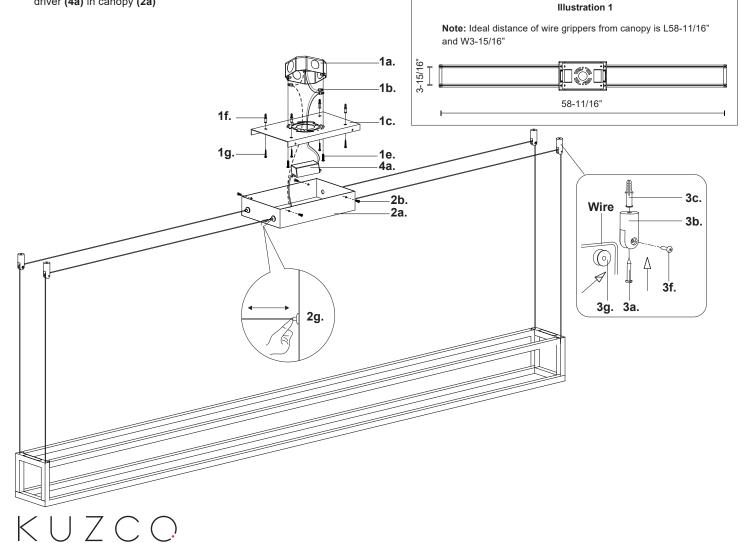

19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com 20230314