LED Vanity

WS13748 INSTALLATION SHEET

START FROM HERE

- · Make sure power is completely off at the fuse box.
- · Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- · Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-855-855-8926


- Remove the fixture from its original packaging. Next, 1. remove the mounting plate (1c) from the canopy (2b) by removing the screws (2a). Secure the mounting plate (1c) to the electrical junction box (1a) (through backplate (1e), in case of illustration-2) with screws (1d) provided in the hardware package.
- 2. You are now ready to mount the canopy to the mounting bar. First connect all wires (1b) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Attach the canopy (2b) to mounting plate (1c) and secure with screws (2a)
- 3. You have now completed the installation of your fixture, enjoy.

1a.

1b.

1c. 1d. 2a.

2b.

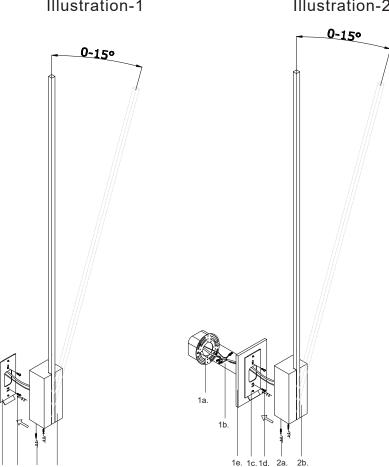

19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com

20181121

Illustration-1

Please Note:

· For dimming, a TRIAC type of dimmer is required.

