LED Wallsconce

START FROM HERE

- Make sure power is completely off at the fuse box.
- · Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support: 1-855-855-8926

Please Note:

- All Kuzco LED fixtures come with pre-wired LED module(s).
- Unless instructed to do so, please do not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage.
- For dimming, an ELV (Electronic Low Voltage) type of dimmer is required.

- 1. Remove fixture from its original package. Remove the mounting plate (1c) from within the canopy (2a) by removing the screws (2b). Remove the decoration bar (3d) from canopy (2a) by removing the screw (2d).
- 2. Attach the lampshade (3a) to canopy (2a) with nuts (3b). Install the up and down glass (3c) to canopy (2a) with screws (2d). Install the decoration bar (3d) to canopy (2a) with screws (2c).
- **3.** Secure the mounting plate (1c) to the electrical junction box with screws (1d) provided in the hardware package.
- 4. Connect all wires (1b) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Push the canopy (2a) towards the mounting plate (1c) so the holes in the canopy and the mounting plate align. Next, attach the screws (2b) and secure the canopy to the mounting plate.

5. You have now completed the installation of your fixture, enjoy.

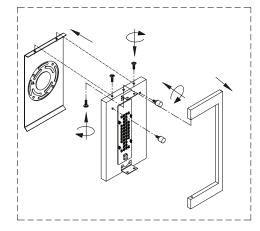

3d.

